

FHsonic®

User's manual

Contents

Contents	2
Chapter 1: general overview	5
Measuring principle	5
Size and Flowrate	6
Constitutive parts	6
FHsonic® inputs-outputs	7
Maximum line pressure	7
Pressure drop	7
Power supply	7
Protection for hazardous area	8
Other characteristics	8
Chapter 2: product overview	9
Electronics architecture	9
Chapter 3: commissioning	10
Reception and storage	10
FHsonic® handling	10
FHsonic® position on metering line	10
Equipment installation	11
Preparation for installation	11
Properties of the measured fluid	12
Installing the FHsonic®	12
Cabling the FHsonic®	12
Chapter 4: FHsonic® installation	13
Customer wiring scheme	13
Connecting the Power supply cable	14
Connecting the multi-pair cable	15
Connecting the Ethernet cable	17
Connecting the Pulse outputs	19
Earthing the meter to the pipe	20
Setting the FHsonic®'s parameters	20
On site Commissioning	20
Chapter 5: configuration of the FHsonic®	21

Meter data checking	21
Zeroing	21
Zeroing measurement	21
Modify zeroing setting	21
Verify zeroing setting	21
Chapter 6: FHsonic® HMI	22
Chapter 7: spare parts and Maintenance.....	24
Spare parts	24
Removing and replacing the transducers or gasket	24
Performing a zeroing procedure.....	24
Chapter 8: Troubleshooting	25
Appendix I: dimensions, weight and metrological features vs meter size	32
Dimensions and weight	32
Metrological features	33
Appendix II: Detailed view of FHsonic® Board.....	34
Flow Calculator board – TOP View	34
Flow Calculator board – BOTTOM View	34
Diag board – TOP View.....	35
Diag board – BOTTOM View.....	35
Power Supply board – TOP View	35
Appendix III: operating restrictions & recommendations	36
Gasket	36
Flange bolting.....	36
Tightening torque	37
Removal from measurement line.....	37
Flow Conditioning.....	38
Appendix IV: safety Information	39
Important information to read before installation	39
Personnel requirements	39
Risks resulting from failure to follow instructions and warnings	39
Safety instructions	39
Operating conditions	39
Repair and maintenance	40

Return.....	40
Appendix V: ATEX & IECEx Installation.....	41
General safety information.....	41
Risk Analysis (Directive 2014/68/EU)	41

Content subject to change without notice

Chapter 1: general overview

The FHsonic® is a 5-paths Ultrasonic Flowmeter (UFM) developed to meet oil and petrochemical markets needs and requirements. The FHsonic® Ultrasonic flowmeters are suitable for use in hazardous area thanks to explosion proof certification in accordance with the requirements of ATEX/IECEx II 2 G (compatible with installation in zone 1).

By using the most innovative ultrasonic technology the FHsonic® product line successfully covers a wide range of applications and flow conditions including laminar and turbulent flow velocity profiles. The FHsonic® UFM are designed for process applications of liquids, crude or refined hydrocarbons, covering a viscosity range up to 500 cSt.


The integration of all components into a single integrated metering solution allows an especially comfortable installation and commissioning.

The FHsonic® does not generate any pressure drop. Its integrity is preserved even after being disturbed by gas pockets, solid bodies, spheres or scrapers.

Calibrated individually in Faure Herman facilities, the FHsonic® generates accurate measurements. FHsonic® installation and commissioning does not require specialist's intervention.

Measuring principle

The velocity of flow along the path between two paired transducers is determined by the "Transit Time" method based on the expression below:

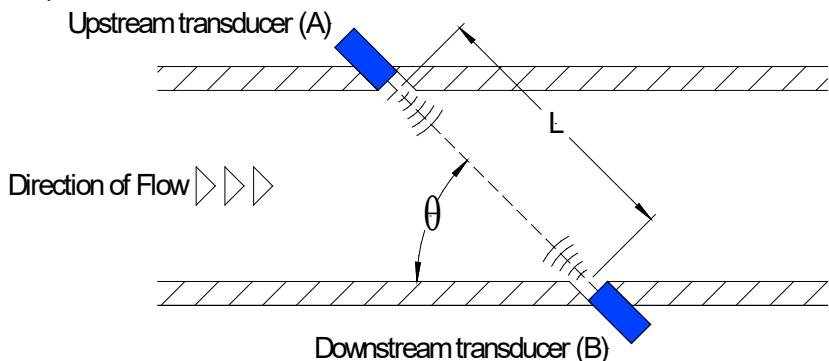

$$V = \frac{L}{2 \cdot \cos\theta} \frac{\Delta T}{T_{BA} \cdot T_{AB}}$$

where $\Delta T = T_{BA} - T_{AB}$

T_{AB} : transit time of the ultrasonic wave from the upstream to the downstream transducer

T_{BA} : transit time of the ultrasonic wave from the downstream to the upstream transducer

Remark: The expression above is independent of the velocity of sound in the product flowing in the pipe.

The velocity of sound is computed by the meter using the following expression:

$$c = \frac{L}{2} \left(\frac{1}{T_{AB}} + \frac{1}{T_{BA}} \right)$$

Size and Flowrate

FAURE HERMAN currently offers standard FHsonic® flowmeter sizes, from 6" (DN150) to 24" (DN600) with certificate in accordance with OIML R117:2019 (see metrological features below).

Other sizes can be studied upon request.

Refer to Appendix I for the dimensions and weight of each of these meters and their metrological features.

Materials of Construction : available in carbon steel and stainless steel (AISI 316 or equivalent), other materials upon request.


The FHsonic® bodies cover the following sizes and pressure ratings:

- Diameters: DN150 to DN600 (6" to 24") (others upon request)
- Flanges: ANSI #150, 300, 600 or 900

Constitutive parts

The FHsonic® provides a compact and integrated metering solution, consisting of:

- Flanged body in either carbon steel, stainless steel, or other optional materials,
- 11 ultrasonic transducers interchangeable under service conditions,
- Explosion proof flow converter
- Up to 2 PT1000 sensors
- Totalizer (optional)

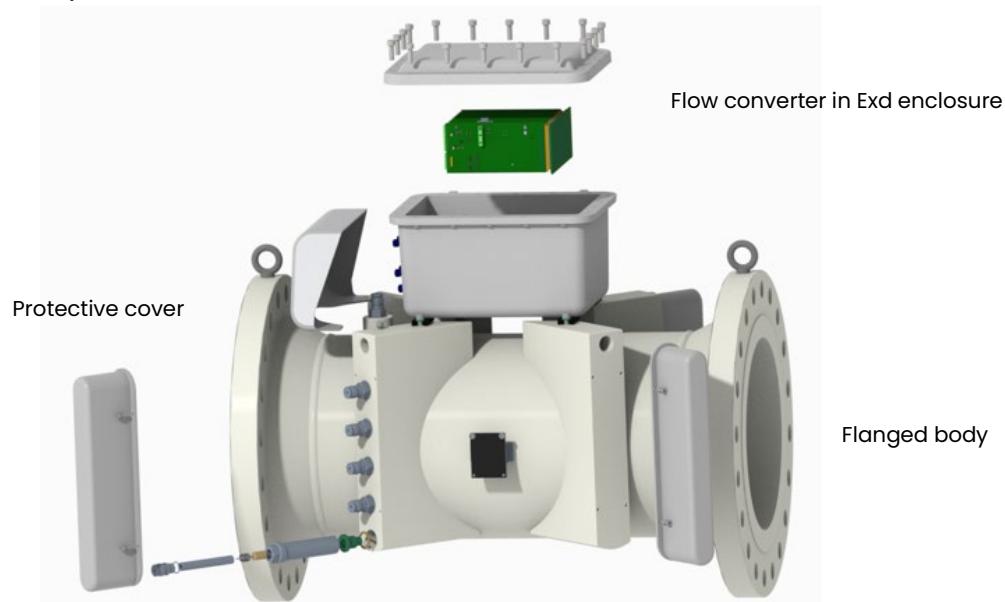

Under standard conditions, the FHsonic® is delivered with :

- Individual calibration certificate
- User's manual
- ATEX / IECEx certificates upon request.

No contact between fluid and electrical components (US transducers, PT1000 sensors, Exd enclosure). The customer bears sole responsibility for the fluids used and shall take all appropriate and necessary precautions.

FHsonic® inputs-outputs

The FHsonic® integrates the following I/O ports:

- 2 x pulses outputs (Open Collector)
- 2 x independent and configurable 4-20mA analogue outputs are available for either flowrate, VOS, VOF or volume reading
- 2 x digital outputs
- 1 Ethernet link (Modbus TCP) for remote Web HMI
- 1 x RS485 serial port (Modbus RTU)
- 1 x RS422 serial port

Maximum line pressure

The FHsonic® is designed for a maximum fluid pressure of 150 bar (1,450 psi), equivalent to #900.

The FHsonic® complies with Pressure Equipment Directive 2014/68/EU.

Pressure drop

The FHsonic® is a real full bore flowmeter that generates no more pressure drop than an equivalent length of straight pipe.

Power supply

The FHsonic® must be powered by a Class 2 24Vdc power supply 3A min

Consumption: 42 Wtyp / 50 Wmax.

Protection for hazardous area

The FHsonic® can be used in hazardous areas classified as Zone 1 IIB T6 or T4, according to its ATEX marking II 2 G – II B T4 or T6, based on:

- Protection of ultrasonic transducers by encapsulation:
 - Ex mb IIC T6 Gb / Tamb : -50°C to +70°C
 - Ex mb IIC T4 Gb / Tamb : -50°C to +115°C
- Protection of FLAMEPROOF HOUSING FOR TRANSDUCERS FHP101 & FHP101C:
 - Ex db IIB T6 T4 Gb / Tamb : -50°C to +120°C
- Protection of Coffret type EJB:
 - Ex db IIB + H2 T6 Gb / Tamb : -40°C to +60°C

Protection of Class 2 power supply and the instrumentation cables: the protection must be made according to local standards and rules. In particular, the cables must correspond to one of the following standards: IEC 60092-300 series / NEK600, BS 6883 / 7197, NF M 87.

Ensure that any personnel that works on the transducer housings or the electronic enclosure is correctly trained and qualified according to EN and IEC 60079-14, and that the local regulations in force will be strictly followed.

Remark: The FHsonic® is delivered with ATEX/IECEx certificates upon request


Other characteristics

- Repeatability: according to OIML R117-1, API MPMS 4.8, customer specifications
- Outdoor use
- Ambient temperature: from -40 to +60 °C (-40 to +140 °F)
- Relative humidity: up to 100%
- Altitude <2000m
- For high ambient temperatures, the electronic enclosure must be protected from direct sun rays.
- Fluid temperature: from -50 to +115 °C (-58 to +239 °F)
- Fluid kinematic viscosity: from 0.2 to 500 cSt
- Ingress Protection: IP66
- Available flanges: #150 (ISO PN 20), #300 (ISO PN 50), #600 (ISO PN 100), #900 (ISO PN 150)
- Back-up battery allowing data and parameter storage for up to 10 years
- Material used for the meter body: stainless steel or carbon steel (other materials may be available upon request)
- Material used for electronic enclosure: Copper-free cast aluminum (stainless steel may be available upon request)
- Overvoltage category: OVC I
- Pollution degree: PD3 outside the electrical box and PD2 inside

Chapter 2: product overview


Electronics architecture

The FHsonic® Electronics architecture is the following :

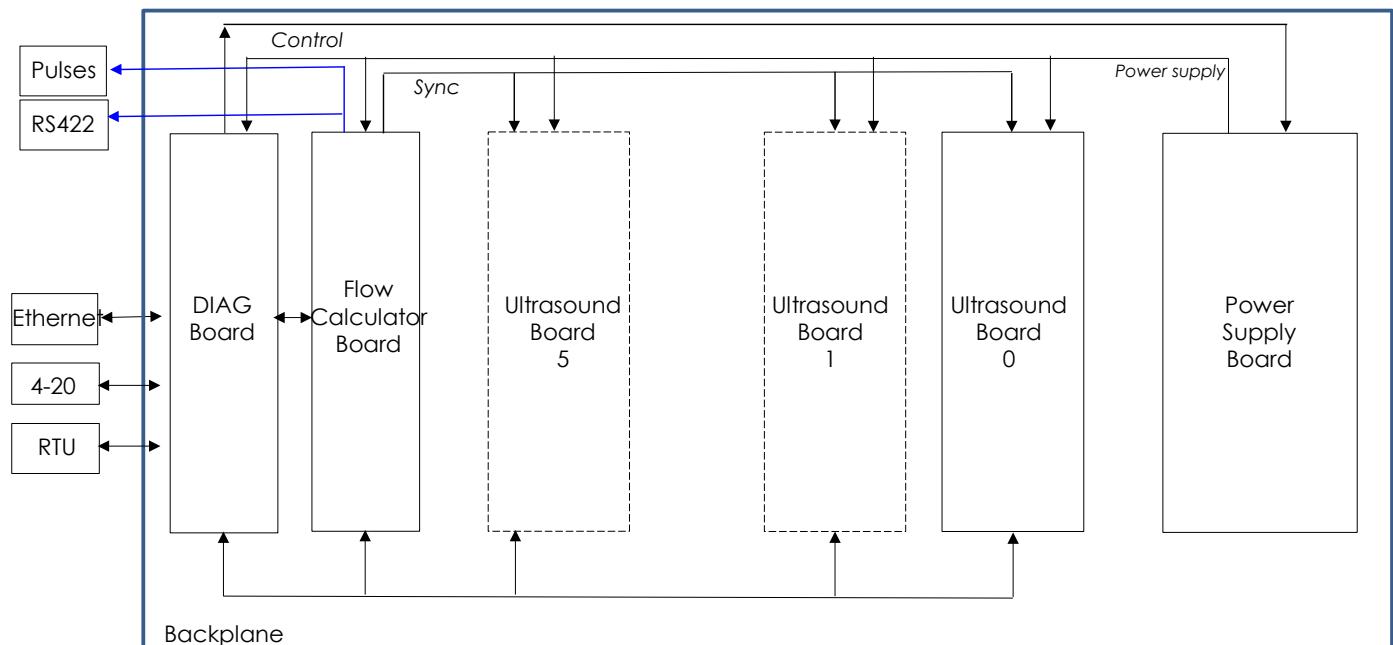

The FHsonic® electronics are based on :

- 5 Ultrasound boards, number 1 to 5, each driving a chord composed of a transducer pair
- 1 Ultrasound board, number 0, driving the vertical diagnostic transducer
- 1 Power Supply board
- 1 Flow Calculator board
- 1 Diag board
- 1 Backplane

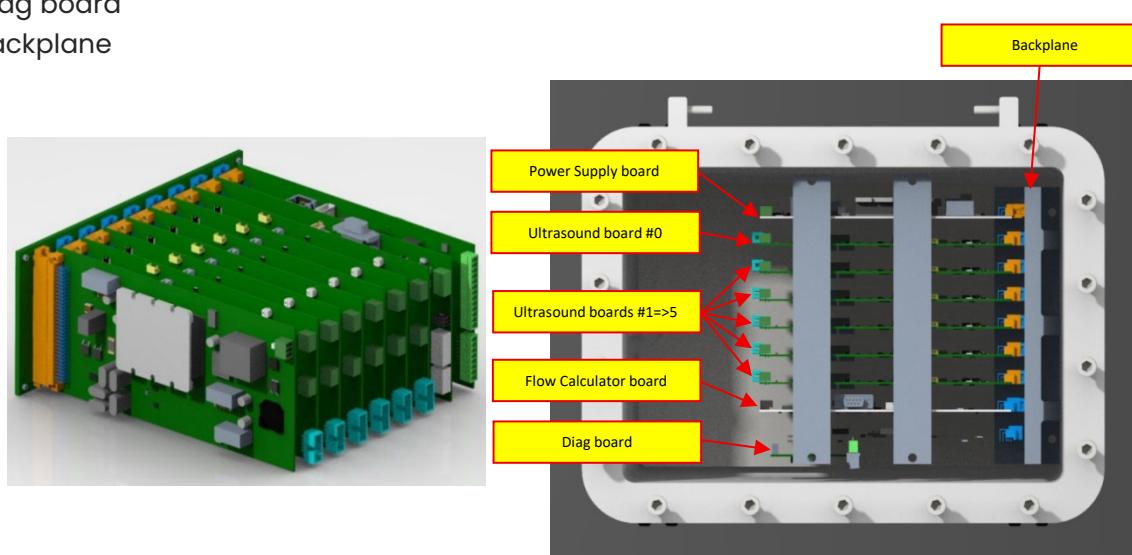

Chapter 3: commissioning

Reception and storage

⚠ Check the general appearance of the packaging and FHsonic® in order to identify possible damages inflicted during transportation.

⚠ Remove the equipment from its packaging, check its general condition and verify the presence of this manual and the calibration certificate.

- Before installing the equipment, it is recommended to keep it in its original packaging.
- Protection covers equipped on flanges of the FHsonic® must be removed only for its installation on the pipe.
- Store the FHsonic® in a dry and clean place. The storage temperature should be maintained between -50 and +80 °C (-58 and +176 °F)
- In case of extended storage (typically more than one year), it is recommended to re-calibrate the meter prior to the installation.

⚠ If the equipment is damaged and/or the documentation is not complete, contact the Support Department immediately by email:

Email: services@faureherman.com

FHsonic® handling

Like any measurement device, the FHsonic® must be handled with great care.

The handling must be done as follows:

- With lifting rings fitted on the FHsonic®
- With straps on both sides of the flowmeter body when there are no lifting rings

FHsonic® position on metering line

The FHsonic® can be installed horizontally, or vertically if the flow is upward.

In all cases, the primary direction of flow shown on the nameplate must be observed.

FAURE HERMAN recommends an upstream flow conditioner followed by a minimum straight length of 10D (10 times the pipe diameter) depending on upstream flow disturbances. The downstream recommended minimum straight length is 5D.

20D upstream straight section is also acceptable upon FH operating conditions analysis.

Please, contact FAURE HERMAN to determine the most suitable flow conditioner for your application.


Equipment installation

Before installation, keep the equipment in its original packaging, sheltered from bad weather and possible impacts.

The mechanical installation of the equipment on the measurement line shall not generate excessive stresses. Specifically, the alignment of upstream and downstream flanges shall avoid the transmission of stresses on the equipment body.

The equipment shall be installed by means of suitable tools.

- Never use a hammer or impact wrench.
- No equipment element is designed to contribute to the tightening of connecting rods.
- Specific tools shall be used, when necessary for the spacing between upstream and downstream flanges.

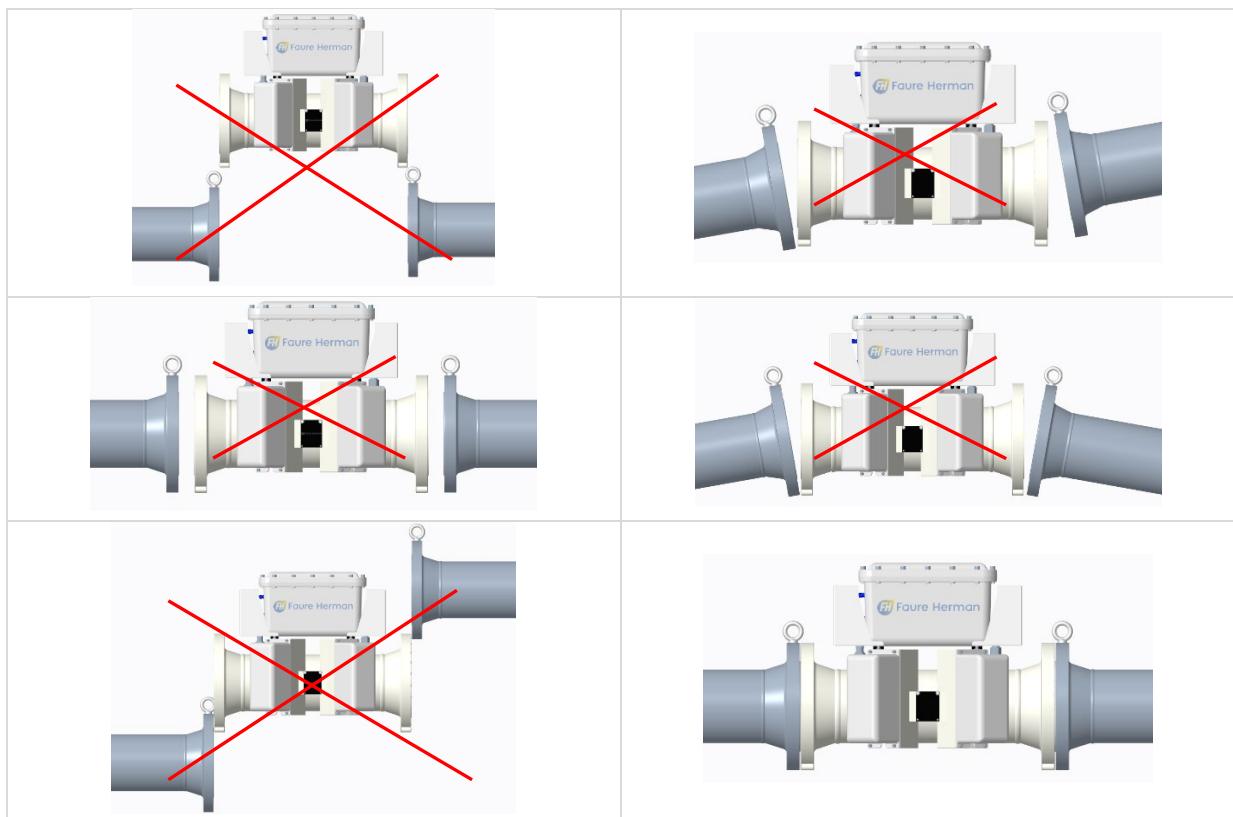

Preparation for installation

Before integrating the meter into the measuring line, check the following points:

- No significant deposits or pollution in the upstream pipe section.
- Respect of primary flow direction (plate).
- Matching of flange dimensions and joint faces, between upstream/downstream piping and equipment.
- Matching of internal diameter of upstream pipe with internal diameter of meter body
- Alignment of the meter with upstream/downstream pipes and absence of obstacles to the flow
- Orientation of electrical I/O.



Like all measuring instruments, the FHsonic® must be handled with care

Properties of the measured fluid

The reliability of measurements can be seriously impacted by the presence of gas and/or solid particles in the measured liquid.

The presence of gas, in the form of bubbles, emulsion or pocket can results in a significant degradation of performance. It is therefore recommended to ensure that there is no risk of gas injection/generation upstream of the measurement and to install a purge or degassing system upstream of the meter if necessary. For an installation in elevation, it is strongly recommended not to position the meter in a "high" area where a gas pocket could form due to gravity and/or volume contraction during a stop.

Installing the FHsonic®

- Check that meter and pipe are correctly aligned.
- Before installing the meter on the pipe, carefully check the cleanliness of flanges in order to obtain an absolute tightness between meter and pipes.
- Check that the meter positioning does not cause any traction effort on flanges and cables.

Cabling the FHsonic®

Please refer to instructions in the following chapter

Chapter 4: FHsonic® installation




For all connections, the circuit-board shall not be removed from the enclosure




Customer wiring scheme

High definition of wiring scheme presented below is available in the documentation supplied with the FHSONIC® under the reference 210044 RAC.

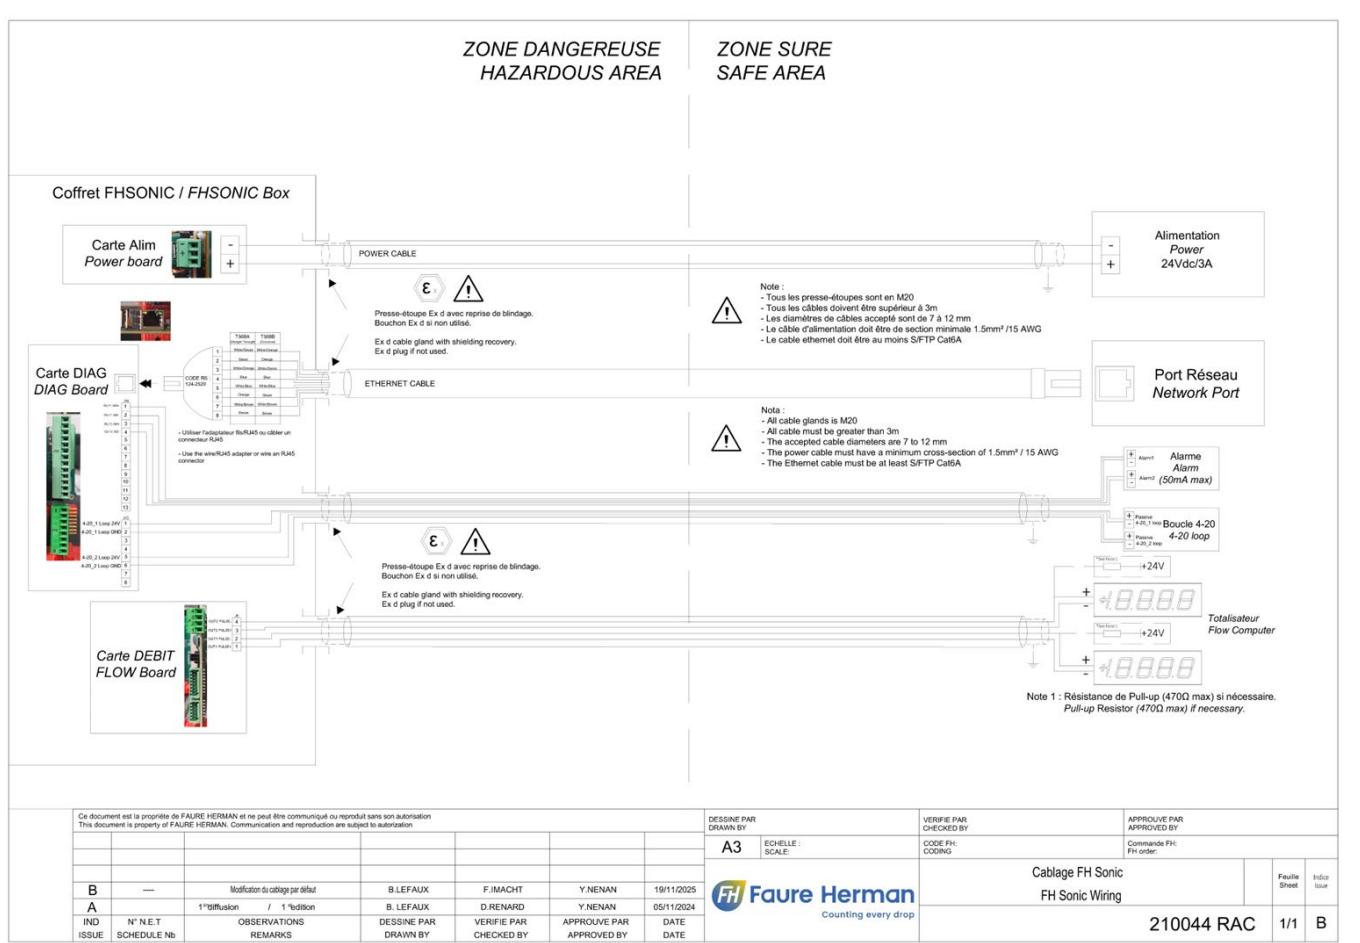

Internal and Customer cables exit through M12 or M20 cable glands as in the drawing below on the flow converter enclosure

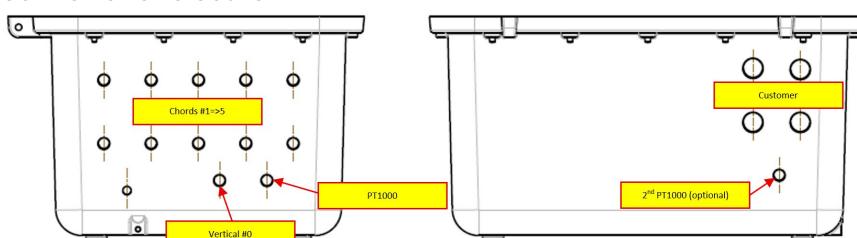

Internal:



- Cable glands for chords #1=>5
- Cable gland for vertical #0
- Cable gland for PT1000

Customer:

- Cable gland for 24Vdc power supply cable
- Cable gland for multi-pair cable:
 - 2 digital outputs
 - 2 4-20mA or HART outputs
 - 1 RS485 serial link for Modbus RTU
- Cable gland for Ethernet link
- Cable gland for Pulse outputs and RS422 link

Connecting the Power supply cable




24Vdc/3A min power supply : 2 wires to be connected to Customer power supply (15 AWG / 1,5mm²)

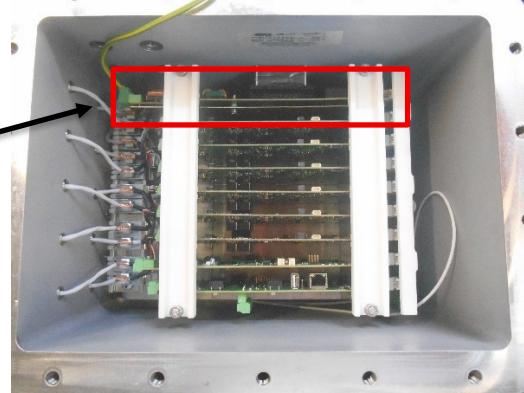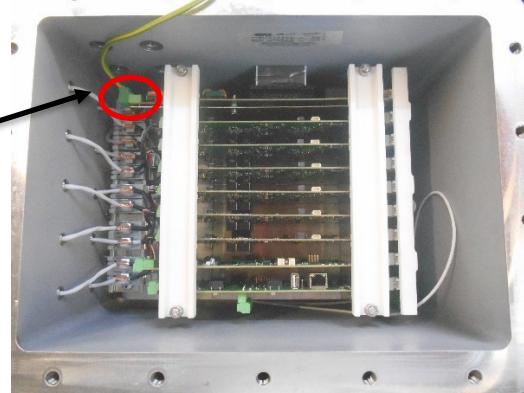Power supply connection	
<ul style="list-style-type: none"> - Spot Power supply board - Remove connector from the board 	
<ul style="list-style-type: none"> - Take the connector, screw upwards - In the pin 2 (middle), connect +24VDC - In the pin 3 (right), connect GND 	 
<ul style="list-style-type: none"> - Plug the connector to the board 	

Connecting the multi-pair cable



Digital outputs : 2 pairs of wires to be connected to Customer equipment

Output Connection (4-20mA)																	
- Spot diag board																	
- Remove the 8 pins connector J13																	
- Connect the wires of 4-20 mA current loops, according to the attached diagram	<table border="1"> <tr> <td>1</td><td>4-20 Loop 24V</td> </tr> <tr> <td>2</td><td>4-20 Loop GND</td> </tr> <tr> <td>3</td><td></td> </tr> <tr> <td>4</td><td></td> </tr> <tr> <td>5</td><td>4-20_2 Loop 24V</td> </tr> <tr> <td>6</td><td>4-20_2 Loop GND</td> </tr> <tr> <td>7</td><td></td> </tr> <tr> <td>8</td><td></td> </tr> </table>	1	4-20 Loop 24V	2	4-20 Loop GND	3		4		5	4-20_2 Loop 24V	6	4-20_2 Loop GND	7		8	
1	4-20 Loop 24V																
2	4-20 Loop GND																
3																	
4																	
5	4-20_2 Loop 24V																
6	4-20_2 Loop GND																
7																	
8																	
- Plug the connector to the board																	

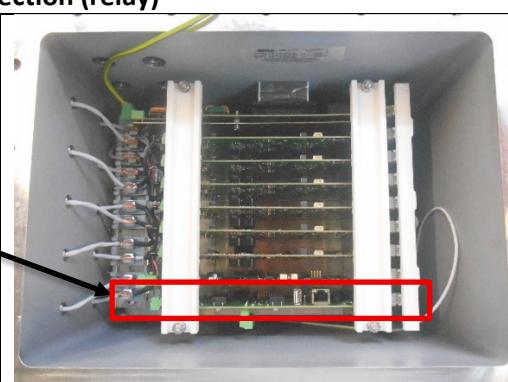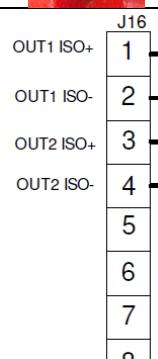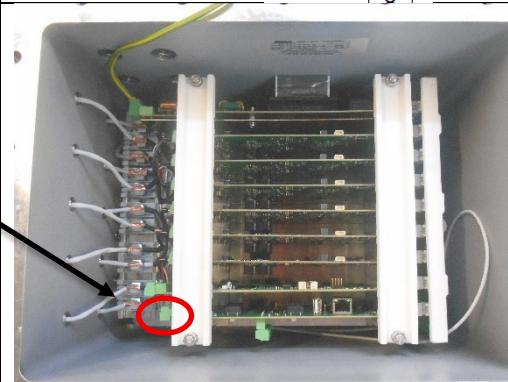
Output Connection (relay)																	
<ul style="list-style-type: none"> - Spot diag board 																	
<ul style="list-style-type: none"> - Remove the 13 pins connector J16 																	
Connect the wires for the relay according to the attached diagram	 <table border="1"> <tr> <td>J16</td> <td>1</td> </tr> <tr> <td></td> <td>2</td> </tr> <tr> <td></td> <td>3</td> </tr> <tr> <td></td> <td>4</td> </tr> <tr> <td></td> <td>5</td> </tr> <tr> <td></td> <td>6</td> </tr> <tr> <td></td> <td>7</td> </tr> <tr> <td></td> <td>0</td> </tr> </table>	J16	1		2		3		4		5		6		7		0
J16	1																
	2																
	3																
	4																
	5																
	6																
	7																
	0																
<ul style="list-style-type: none"> - Plug the connectors to the board 																	

Connecting the Ethernet cable

Ethernet/Modbus TCP : RJ45 connector to be connected to Customer router or switch

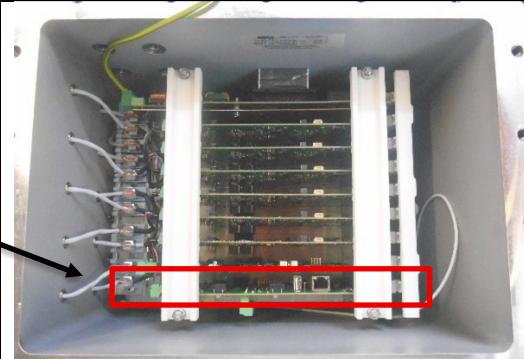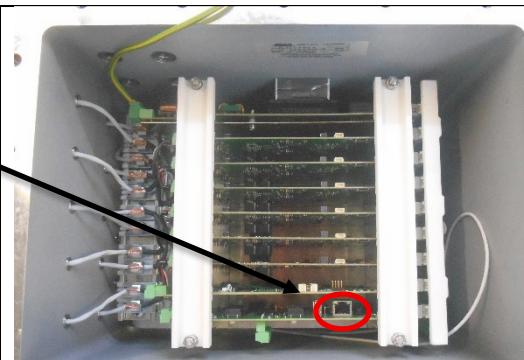Ethernet Connection																												
<ul style="list-style-type: none"> - Spot diag board 																												
<p>Use the RJ45 Adapter</p> <p>OR</p> <p>Use a crimp RJ45 connector</p> <p>Carry out the wiring according to the table below</p> <p></p> <p>The Ethernet cable must be at least S/FTP Cat6A</p>	 <p>OR</p> 																											
<table border="1"> <thead> <tr> <th>Pin number</th><th>Standard T568A</th><th>Standard T568B</th></tr> </thead> <tbody> <tr> <td>1</td><td>White/Green</td><td>White/Orange</td></tr> <tr> <td>2</td><td>Green</td><td>Orange</td></tr> <tr> <td>3</td><td>White/Orange</td><td>White/Green</td></tr> <tr> <td>4</td><td>Blue</td><td>Blue</td></tr> <tr> <td>5</td><td>White/Blue</td><td>White/Blue</td></tr> <tr> <td>6</td><td>Orange</td><td>Green</td></tr> <tr> <td>7</td><td>White/Brown</td><td>White/Brown</td></tr> <tr> <td>8</td><td>Brown</td><td>Brown</td></tr> </tbody> </table>		Pin number	Standard T568A	Standard T568B	1	White/Green	White/Orange	2	Green	Orange	3	White/Orange	White/Green	4	Blue	Blue	5	White/Blue	White/Blue	6	Orange	Green	7	White/Brown	White/Brown	8	Brown	Brown
Pin number	Standard T568A	Standard T568B																										
1	White/Green	White/Orange																										
2	Green	Orange																										
3	White/Orange	White/Green																										
4	Blue	Blue																										
5	White/Blue	White/Blue																										
6	Orange	Green																										
7	White/Brown	White/Brown																										
8	Brown	Brown																										
<ul style="list-style-type: none"> - Plug the RJ45 connector to the board 																												

In order to access direct connections :

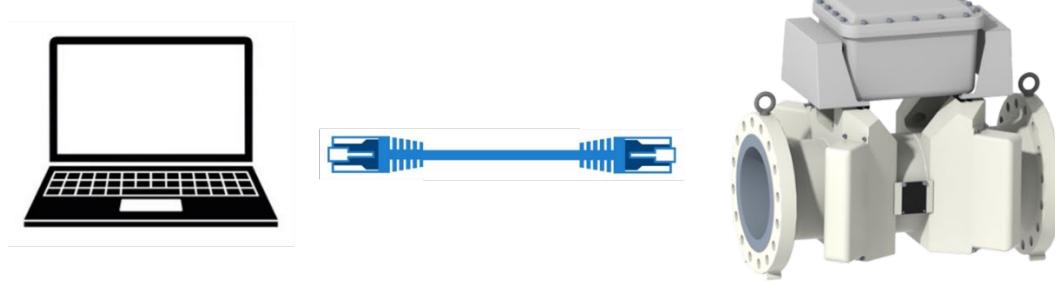

A shunt must be placed in the diag board. It permits to switch between both modes :


- DHCP
- Fixed IP

Warning: This modification requires turning OFF the power supply. Once power supply is off, wait at least one minute before opening the enclosure.



To do this operation, the diag board needs to be disconnected and removed from the EJB enclosure. This operation must be carried out with maximum care.

This adjustment will be considered after start of the FHsonic®.

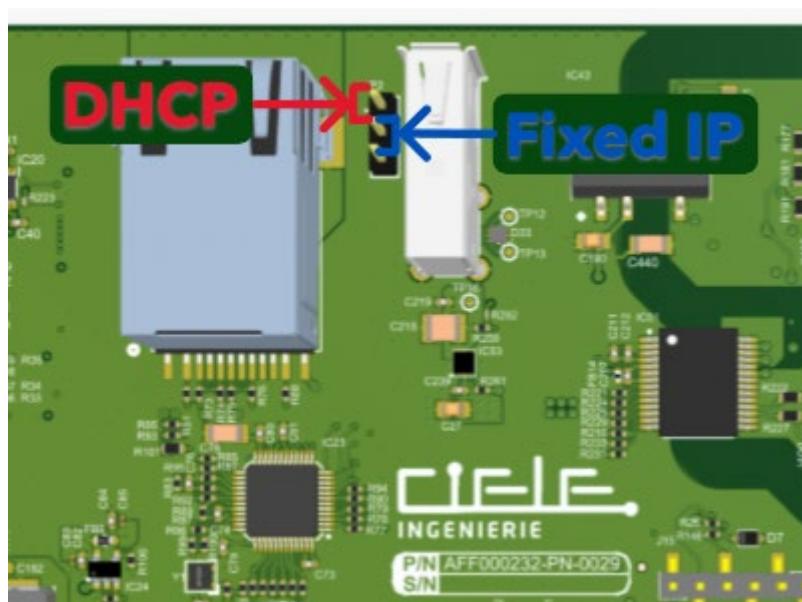

When the strap is enabled to select the direct Ethernet configuration, the IP settings are as follows:




IP address: 192.168.0.250

Subnet mask: 255.255.0.0

To connect a PC directly to the device, configure the PC's network interface with a static IP address in the 192.168.x.x range, making sure it is different from the device's IP address.


Connecting the Pulse outputs

Pulse outputs (Open Collector) : 2 pairs of pulse outputs to be connected to Customer flow computer

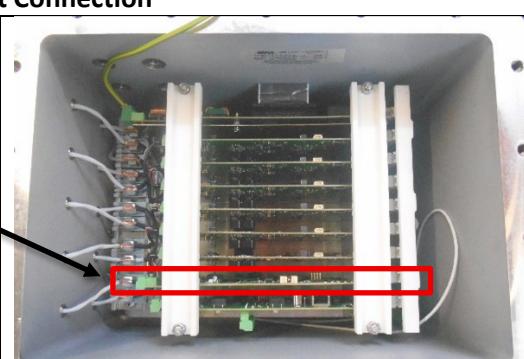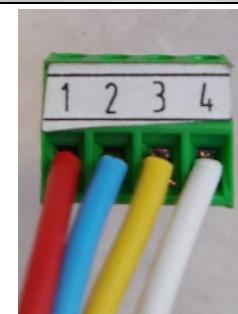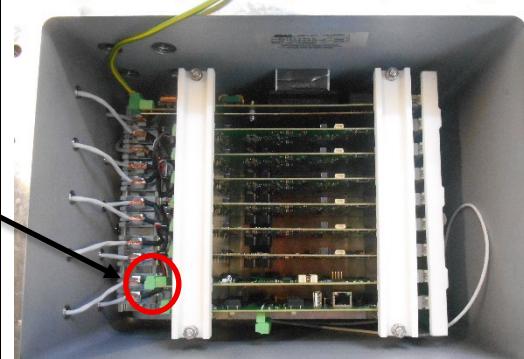Pulse Output Connection	
<ul style="list-style-type: none"> - Spot debit board - Remove connector from the board 	
<ul style="list-style-type: none"> - Take the connector, screw upwards - Pin 1 & 2: 1st pulse output <ul style="list-style-type: none"> • Pin 1 : Output 1 + • Pin 2 : Output 1 - - 3 & 4 : 2nd pulse output <ul style="list-style-type: none"> • Pin 3 : Output 2 + • Pin 4 : Output 2 - 	
<ul style="list-style-type: none"> - Plug the connector to the board 	

Earthing the meter to the pipe

As the meter's electronics are floating-potential designed, the meter can be connected to the pipe without risk of damage in case of pipe with cathodic protection.

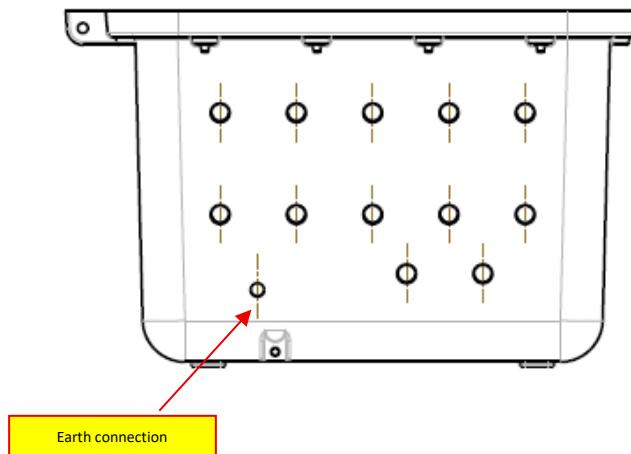

Setting the FHsonic®'s parameters

The FHsonic® parameter setting is described in the next chapter.

On site Commissioning

Ensure that measurement is not altered by gas pockets, bubbles or suspended particles. Gas pockets, bubbles and suspended particles impede the propagation of ultrasonic waves. If present in excessive quantities, they may compromise the validity of the measurement.

Chapter 5: configuration of the FHsonic®

The parameter setting of the FHsonic® is performed with a PC connected by Ethernet to the meter and the use of the **Putty** application as a serial console.

Meter data checking

Display the configuration of the flowrate calculation :

- “**aff g m**”

Zeroing

To do a zeroing procedure, there is 3 steps :

- Zeroing measurement
- Modify zeroing settings
- Zeroing verification

Zeroing measurement

A command on the diag board, will record the deltaT average on the chosen period:

- “**config g 0 xx**” with xx as the chosen period in second
- After the period, the command “**config g 0 0**” will display the recorded deltaT average.

The user can then choose to continue using the current zeroing setting if the deltaT average is sufficient or chose to modify the zeroing setting

Modify zeroing setting

A command set on the diag board will allow zeroing setting modifications.

First step, modify zeroing setting in the diag board configuration:

- “**config c n 0 xxxx**” with “n” as chord number and “xxxx” as new zeroing value in pico-second.

When all needed zeroing setting have been modified, a command will transfer this new zeroing setting on Flow Calc board to a new record in the zeroing history:

- “**config u f**”

Verify zeroing setting

Display the parameters of the chords, including L et Daxe, thresholds, gains, zeros, synchro (delay of firing) :

- “**aff q p**”

Chapter 6: FHsonic® HMI

FHsonic® HMI is a Web HMI developed on Javascript.

It displays different data and signal visualizations from the meter.


They are grouped into several pages, 'Synthesis', 'Details', 'Diag' and 'US signal' which are only available depending on the user's access right.

This HMI is generated through the Diag board.


The address to enter on the user's web browser (Chrome, Edge and Firefox are accepted) is the IP address of the Diag Board.

The layout of each page is configurable

Page 'Synthesis' example

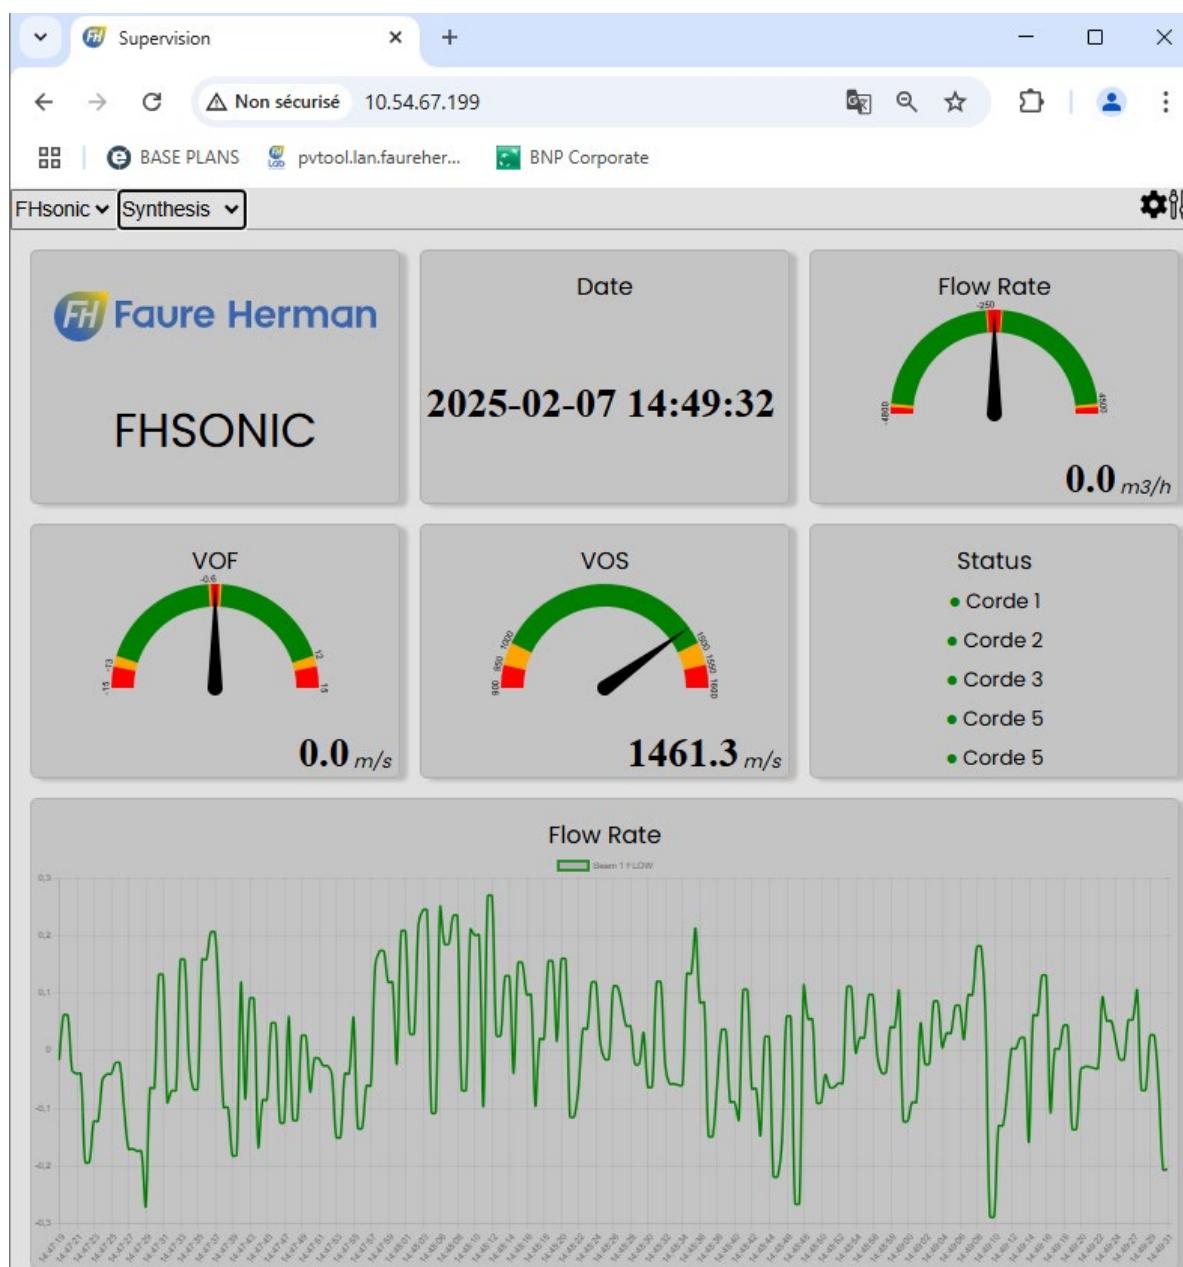

Page 'Details' example

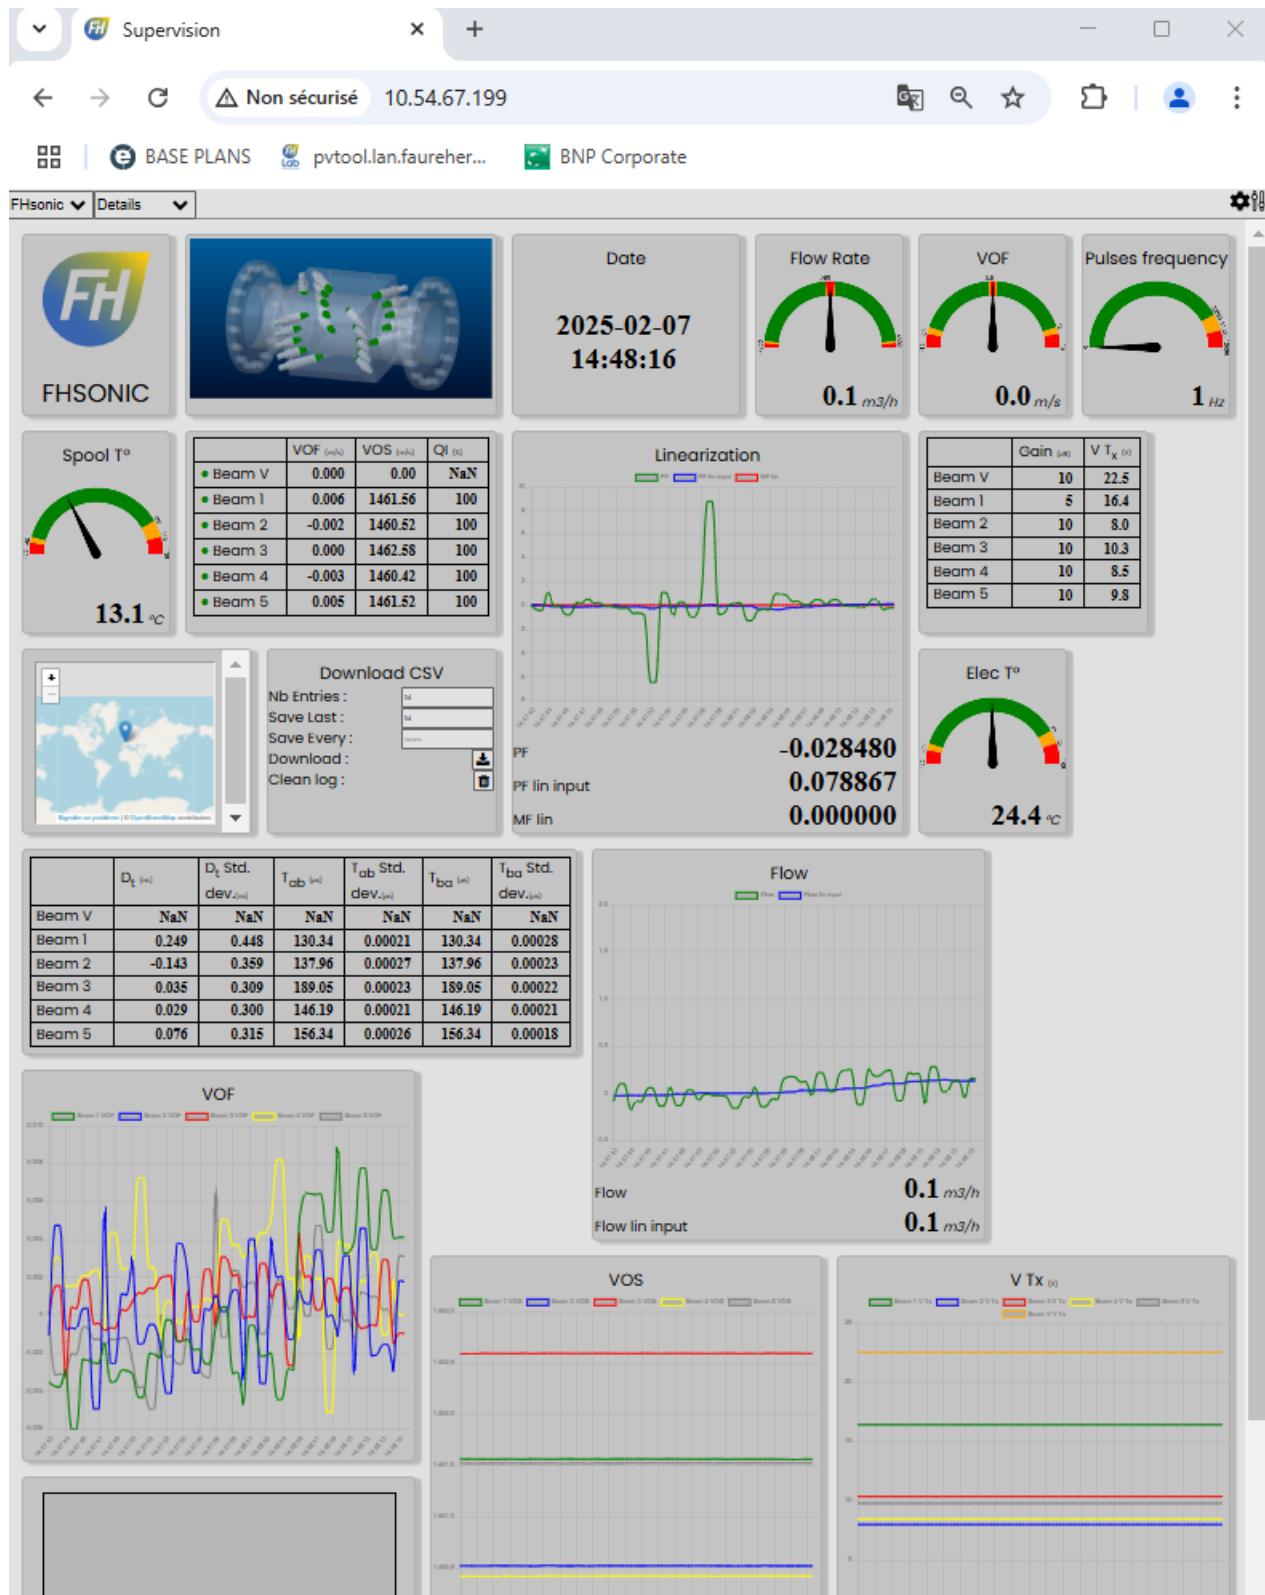

Chapter 7:

spare parts and Maintenance

The FHsonic® is a maintenance-free instrument, mainly because it does not have any moving parts. However, users may occasionally need to replace transducers, gaskets or electronics.

Warning: The replacement of any parts requires turning OFF the power supply. Once power supply is off, wait at least one minute before opening the enclosure.

Spare parts

To reduce the downtime period due to either transducer, gasket or electronics failures, Faure Herman recommends the following spare parts:

- US transducer pairs Article code : SI1760TXP0-X0_CM (x2)
- PT1000 transducer Article code : U11081
- Complete electronics set Article code : 510141
- Gaskets

Important: The replacement of the electronics must be done by a FAURE HERMAN technician or trained by FAURE HERMAN personnel with qualification following IEC and EN 60079-14.

Removing and replacing the transducers or gasket

In case of failed chord, identify the missing ultrasonic path and the failed transducer(s) by checking Web HMI page. One path corresponds to two transducers.

The replacement can be done on load

- To determine the failed transducer, measure its capacitance on the connector at the end of its cable.
- The value must be between 500 and 700pF for each transducer.

Refer to FAURE HERMAN FHsonic® US Transducers and PT1000 sensor replacement manual **TEC 23.07.07**.

Performing a zeroing procedure

- If possible, reduce the flow as soon as possible while maintaining the pipe at the operating pressure or at least 4 bars.
- Close the nearest upstream and downstream valves if possible. The pressure shall remain at the previously established value.
- Allow a few minutes (depending on the installation and the diameter of the pipe) for flow disturbances to stabilize.
- Perform the zeroing operation by using a PC connected to the meter through Ethernet link or RS422 link.

Chapter 8: Troubleshooting

This chapter provides guidance on troubleshooting common issues that may occur during normal use of the product. It outlines typical problems, possible causes, and step-by-step solutions to help users quickly identify and resolve errors. Before contacting technical support, users are encouraged to review this section to ensure the issue cannot be resolved using the instructions provided.

1. No Power/LED Indicators inside the electronic enclosure

Normal working : power supply board LED ON and flowrate board LED blinking


- Check external power supply (24Vdc, 3A peak for power-up)
- Verify wiring of the 3-pin connector
 - +24Vdc in the pin-2 position of the plug (screw upwards)
 - GND in the pin-3 of the plug (screw upwards)
- Verify that the plug is well inserted in the power supply board socket
- Verify that the power supply board is well plugged on the mother board
- Test with a known working power source.

→ If not resolved, contact FAURE HERMAN support.

2. No pulse outputs

Normal working :

- If the pipe is empty, 1 pulse output is @0V and the other pulse output is with pulses @12kHz
- If the pipe is full, none of both pulse outputs is with pulses @12kHz
- Verify that the 4-pins green plug of pulse cable is well inserted in the flowboard board socket
- Verify the wiring of the output pairs following the schematics below

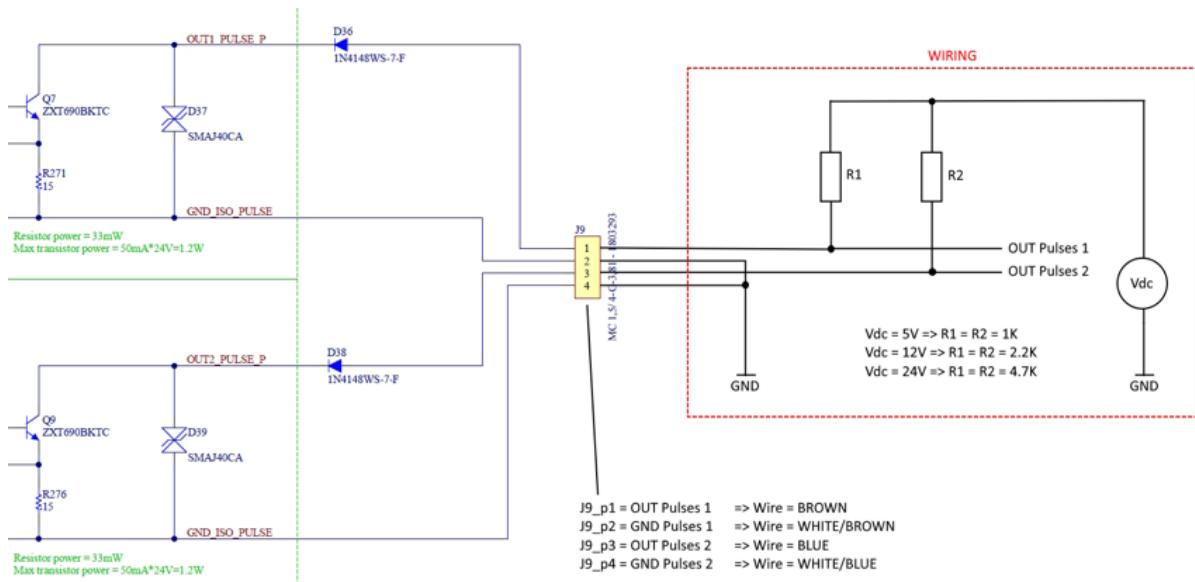


- Verify the pull-up of the pulses at the side of the installation/customer computer through resistors R1 and R2

→ If not resolved, contact FAURE HERMAN support.


3. No HMI page

Normal working : HMI on 4 pages Synthesis/Details/Diag/US signals on browser with IP address (fixed or DHCP)

- Verify that the RJ45 adapter is well plugged on the RJ45 socket
- Verify the wiring at both ends of Customer ethernet cable : they have to be at the same standard : T-568A ou T-568B

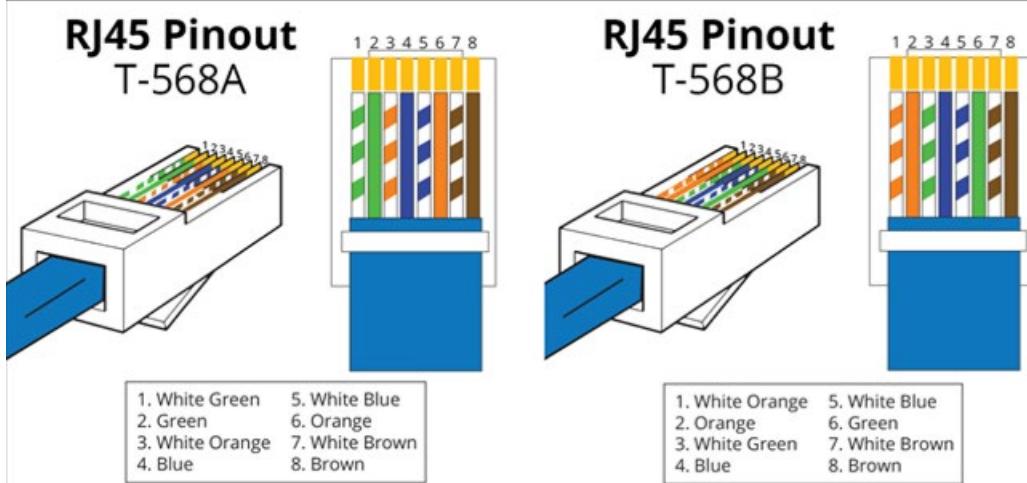

- Verify the IP address and the type of IP address : fixed IP or DHCP IP
- If configuration of point-to-point ethernet link between Meter and Computer :
 - Verify that the 2-position shunt is present on the diag board and positioned in 'Fixed IP' position as on the picture below if case of point-to-point ethernet link between Meter and Computer
- If configuration of local ethernet network :
 - Verify that there is no shunt or if there is the shunt, it is positioned in 'DHCP' position as on the picture below
 - Fixed IP position if the meter is connected directly to a PC with point-to-point link

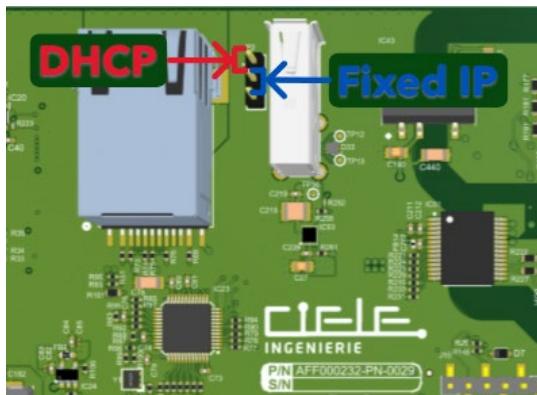


→ If not resolved, contact FAURE HERMAN support.

4. Check through HMI pages


- Nominal working pages :

Page 'Synthesis'

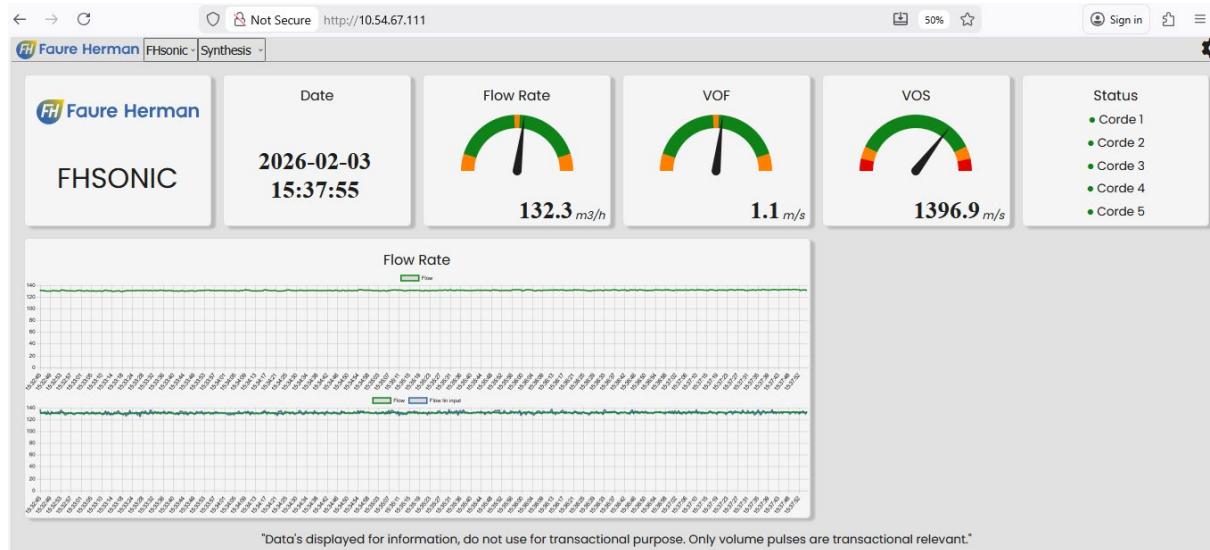


- The bullets of the 5 beams (Corde in French) are Green
- The flowrate, the VOF et the VOS have value

Page 'Details'

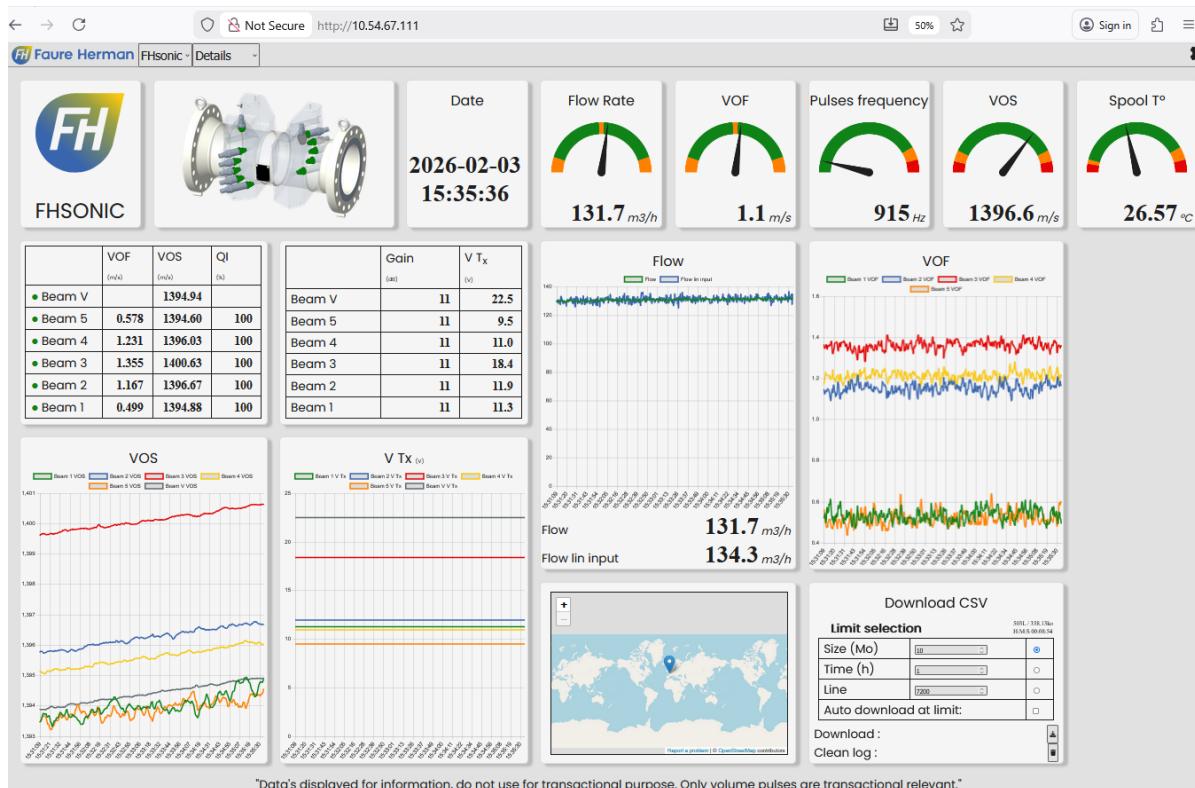

- On the FHsonic® picture, all 10+1 transducers are green

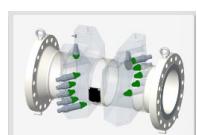

- All parameters have value and don't display 'Err' word
- The QI (Quality Index) of the 5 beams are @100%

Page 'Diag'

The Diag page displays the following data:

- Beam's fault counter:** Shows fault counts for various beam types (V, 1, 2, 3, 4, 5) and beam numbers (1 to 5).
- Beam_{ab} Beam_{ba} fault counter:** Shows fault counts for beam_{ab} and beam_{ba} for each beam number.
- Linearization:** A graph showing linearization parameters for each beam. The graph shows a green line with markers and a red line with markers. Below the graph are values for PF, PF lin input, MF lin, and Dilatation coef.
- Support only : beam's fault counter:** Shows fault counts for various beam types and beam numbers.
- Beam parameters:** A table showing V0F (m/s), V0S (m/s), D0 (m), Ds (m), Ds Stat (m), Beam Number (%), Beam Index (%), Beam (m), V, T (V), T0 Us, T0 T, and T0.
- Elect T°:** A gauge showing the temperature as 22.432 °C.

Data's displayed for information, do not use for transactional purpose. Only volume pulses are transactional relevant."

- Data for expertise diagnostics with FAURE HERMAN support

US signals page


The US signals page displays the following data:

- Launch visu echo:** A table showing Gain (dB) and V Tx (V) for beams V, 5, 4, 3, 2, and 1.
- Beam plots:** Six plots showing launch visu echo for Beam 1, Beam 2, Beam 3, Beam 4, Beam 5, and Beam V. Each plot shows two traces: Rx 1 trace (green) and Rx 2 trace (red). The plots include a legend for Rx 1 threshold 1, Rx 1 threshold 2, Rx 2 threshold 1, and Rx 2 threshold 2.
- 3D model:** A 3D model of the probe assembly with various components labeled.

Data's displayed for information, do not use for transactional purpose. Only volume pulses are transactional relevant."

- When clicking on 'Launch visu echo' (click 2 times if needed), the 5 beams + 1 beam V (vertical beam for fluid VOS velocity-of-Sound checking) show pulses with good contrasts. Red color is normal : it is for filtered signals.

Note : when clicking on the gearwheel, several options are proposed to update/modify the appearance of the pages

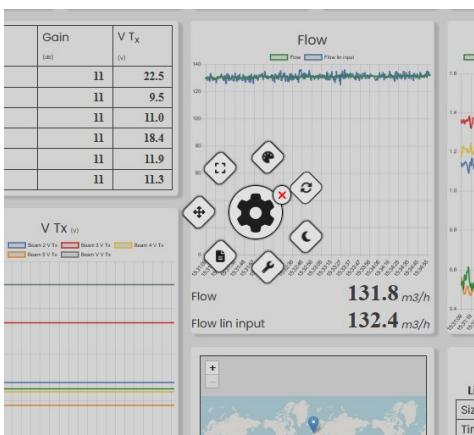


Issue list

a. Spool PT1000 failure


- When all parameters display 'Err.' on Synthesis and Details pages, check the plug of the temperature sensors PT1000 : if the temperature of the spool is 'Err' all metrological calculations are in error.




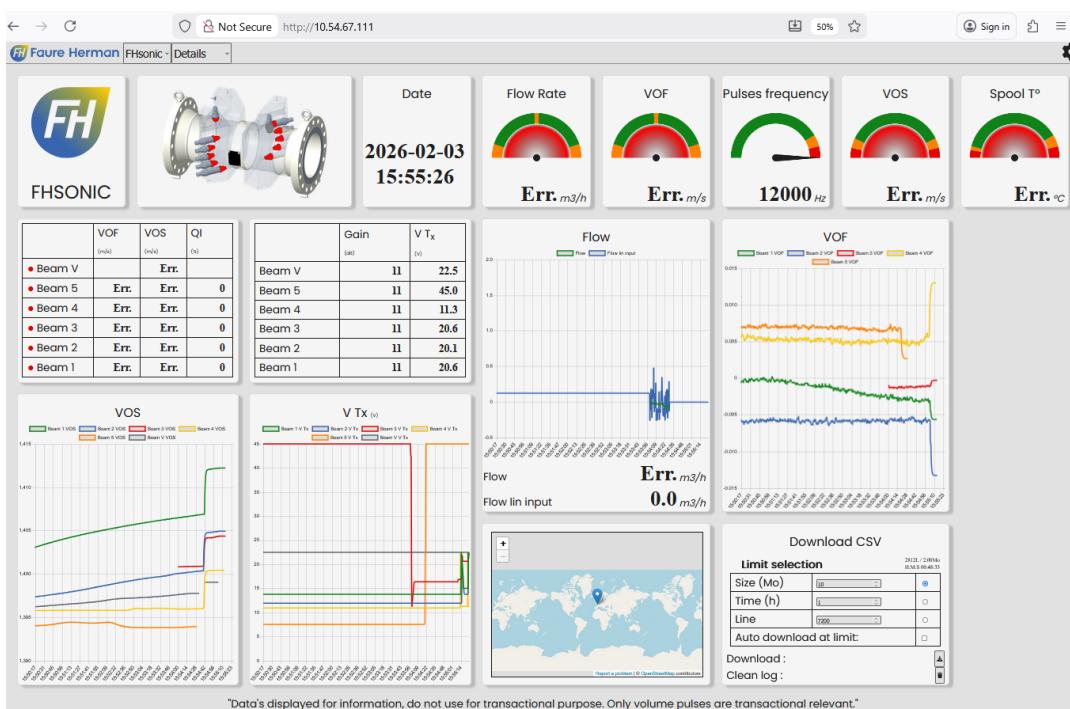

b. Beam failure

- When a beam (Corde) bullet is red on Synthesis and Details page, there is an issue with this beam :
 - Check that the plugs of the transducers are well pushed into the sockets of the Chord board
 - Check that the cables of those transducers are not visually damaged
 - If not resolved, contact FAURE HERMAN support.

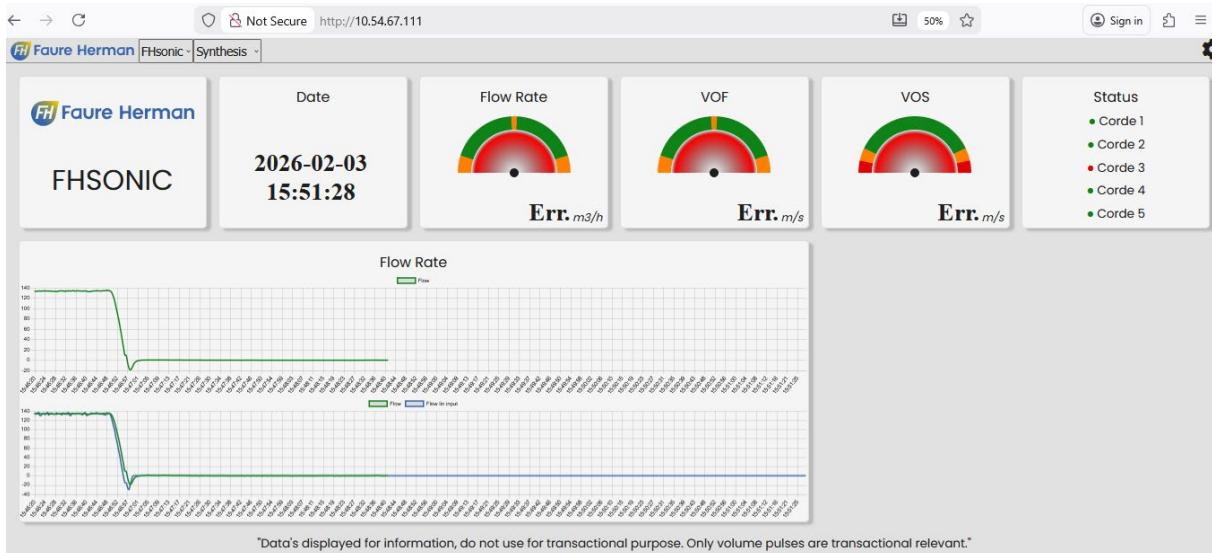

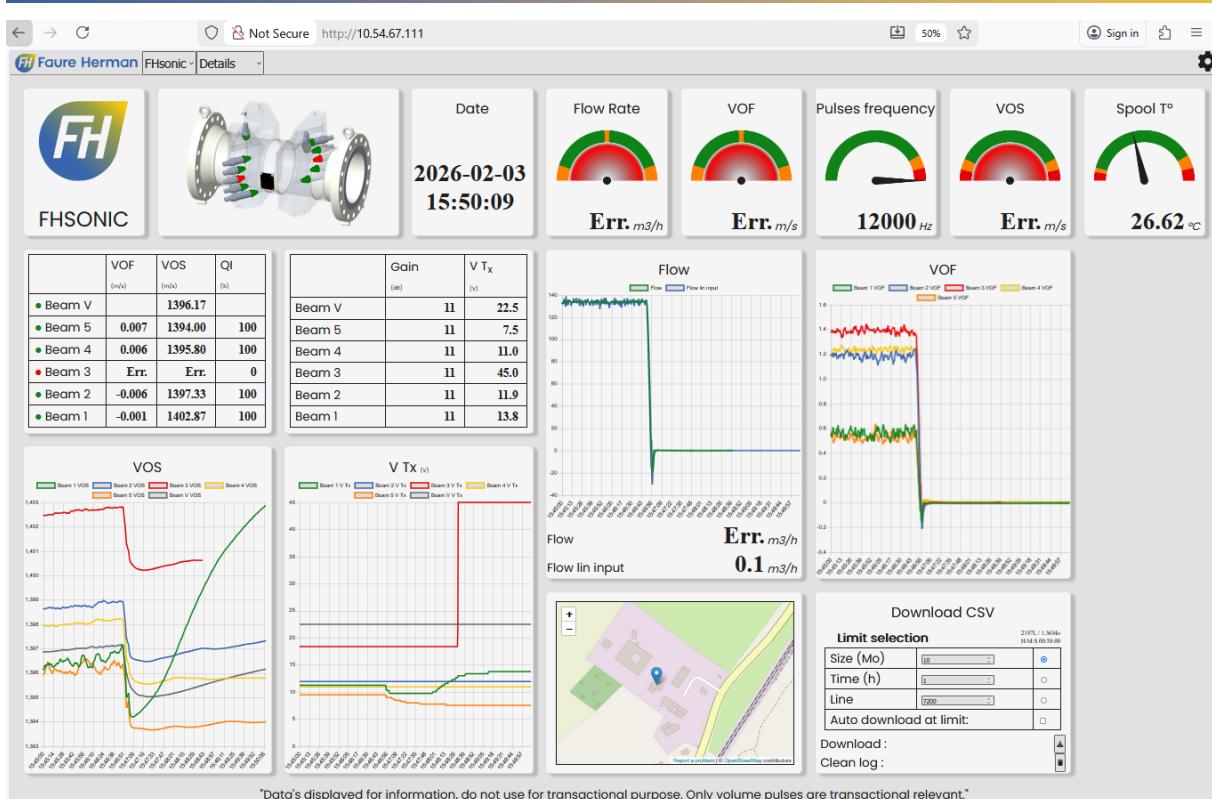

c. Discrepancy between Beam 1/2/3/4/5 VOS and Beam V VOS (difference > 50m/s)

- a. Check if there is some solid deposit inside the spool or some bubbles in the fluids or in front of the transducer

→ If not, contact FAURE HERMAN support.

5. Communication Errors (4-20mA/Digital Pulse)

- 4-20mA: Flowrate and Fluid velocity-of-sound (VOS) transmitted
- Measure output current with a multimeter.


→ If issue , contact FAURE HERMAN support.

- Digital output : Warning transmitted

→ If issue , contact FAURE HERMAN support

Appendix I: dimensions, weight and metrological features vs meter size

Dimensions and weight

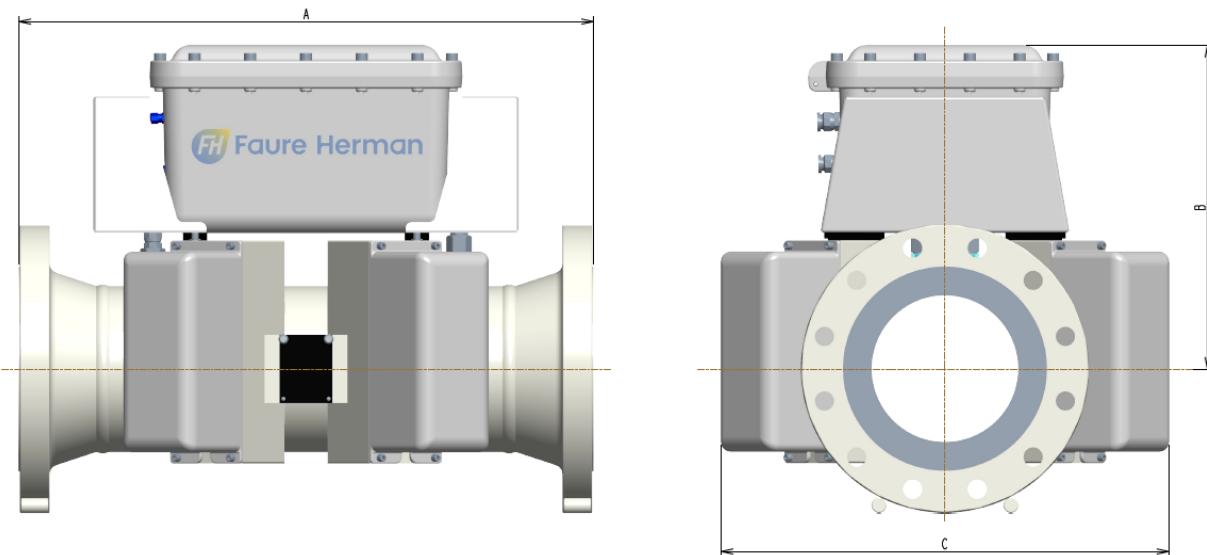

Meter size		A		B		C		Approx. Weight			
		#150-#900						Min		Max	
"	mm	"	mm	"	mm	"	mm	lbs	kg	lbs	kg
6	150	26	660					551	250	992	450
8	200	30	762	16.8	428	23.4	594	661	300	1102	500
10	250	32	812					772	350	1213	550
12	300	35	889	18.3	466	23.4	596	838	380	1279	580
14	350	37	940					992	450	1543	700
16	400	40	1016	19.8	505	26.5	675	1213	550	1653	750
18	450	43	1092					1543	700	2094	950
20	500	46	1168					1874	850	2646	1200
24	600	52	1320					2535	1150	3307	1500

Metrological features


Meter size		Qmin (V = 0.5 m/s)		Qmax (V = 12 m/s)		Minimum Measured Quantity	Minimum Reynolds Number	Typical Kfactor	
"	mm	BPH	m ³ /h	BPH	m ³ /h	m ³		p/Bbl	p/m ³
6	150	214	34	5070	806	2	5000	6995	44000
8	200	365	58	8768	1394	2	5000	3975	25000
10	250	579	92	13825	2198	5	5000	2544	16000
12	300	818	130	19618	3119	5	5000	1749	11000
14	350	988	157	23706	3769	5	6000	1431	9000
16	400	1289	205	30977	4925	5	6000	1113	7000
18	450	1635	260	39204	6233	5	6000	874	5500
20	500	2032	323	48721	7746	5	6000	715	4500
24	600	2937	467	70484	11206	5	6000	477	3000

Values for ANSI #300

For process application, higher Qmax could be performed upon request.

Appendix II: Detailed view of FHsonic® Board

Flow Calculator board – TOP View

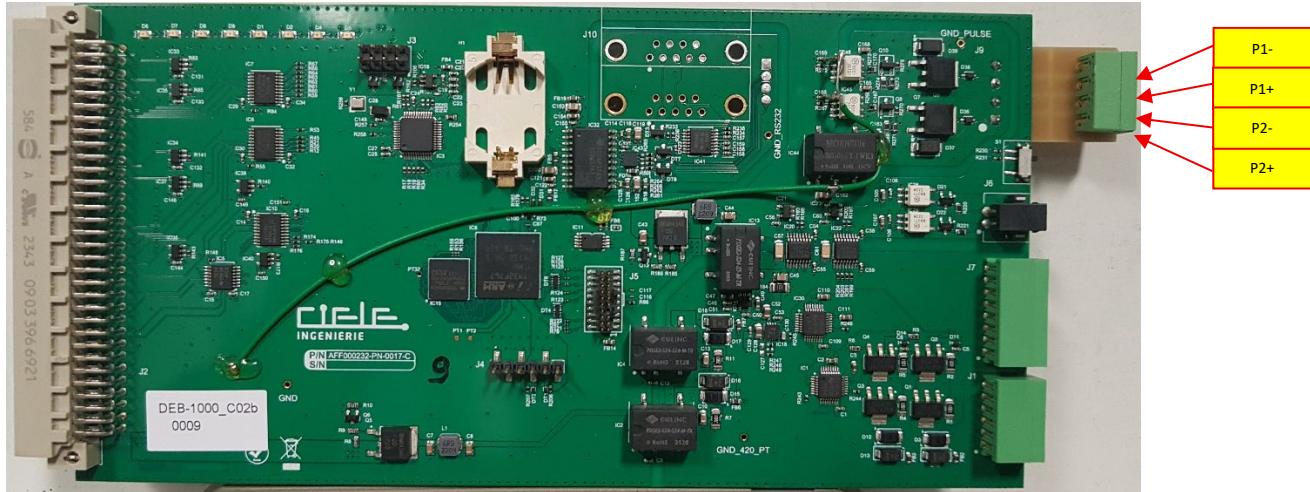


If necessary, bias pulse outputs (Open Collector) using an external DC power supply:

- Connect each P*- to external 0V
- Connect each P*+ to external +Voltage through an individual 470R resistor with:
 - o +Voltage determined according to Customer flow computer input limits (and +24Vmax),
 - o Resistor's power determined according to +Voltage (ex: 2W for +24V)

RS422 : 4-wires to be connected to Customer equipment for Metrological Data reading

Flow Calculator board – BOTTOM View

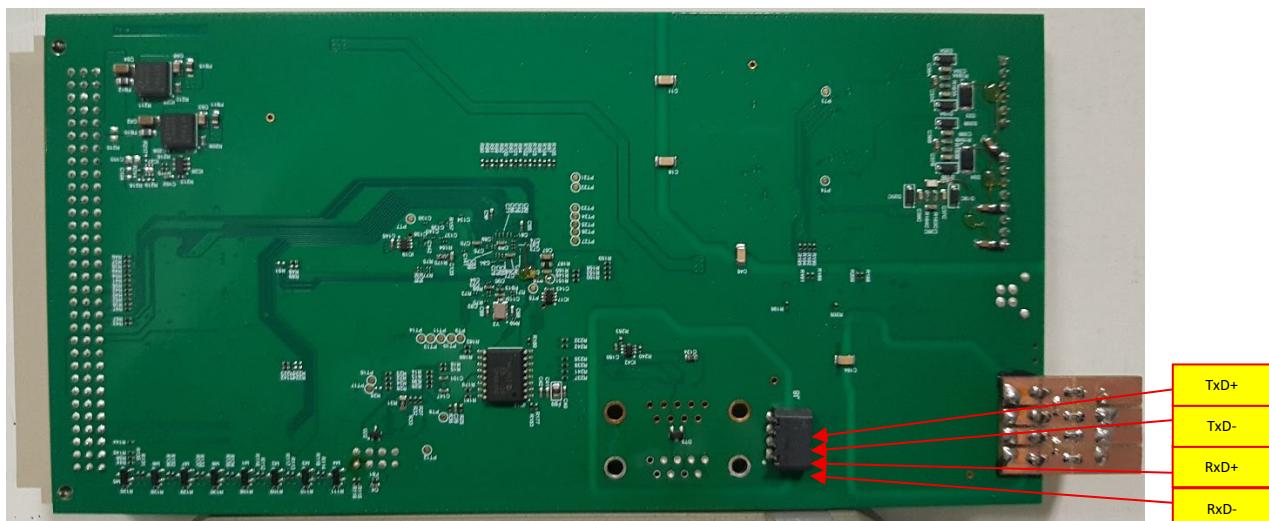

Connect **TxD+/-** from Flow Calculator board to **RxD+/-** on the other side

Connect **RxD+/-** from Flow Calculator board to **TxD+/-** on the other side


Diag board – TOP View




Digital outputs are not polarized.

Modbus RTU (RS485) : 3 wires to be connected to Customer equipment

Diag board – BOTTOM View

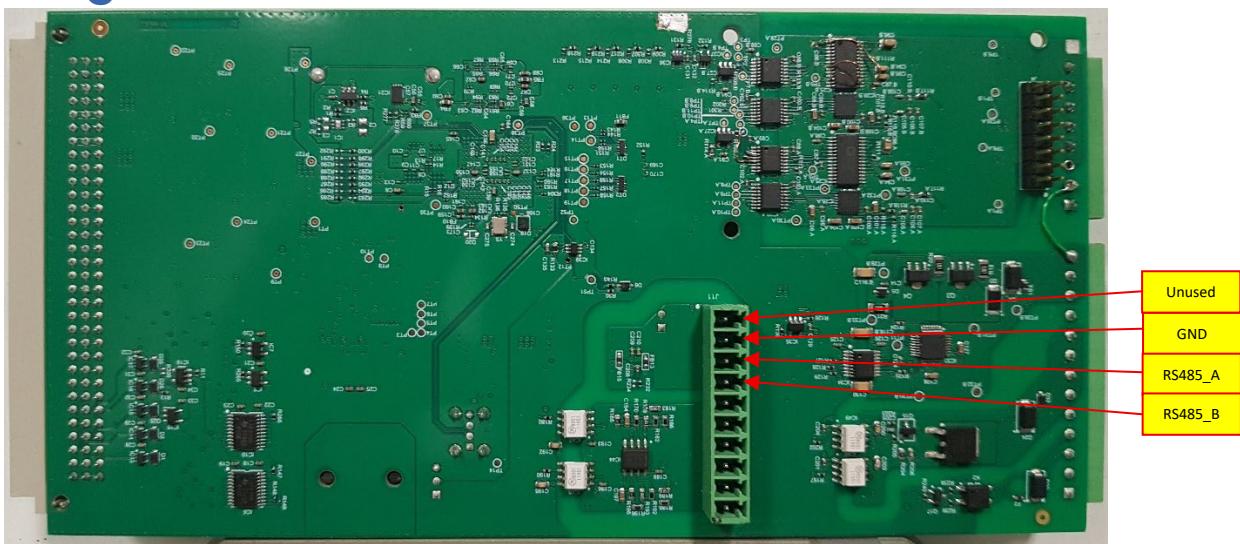

Power Supply board – TOP View

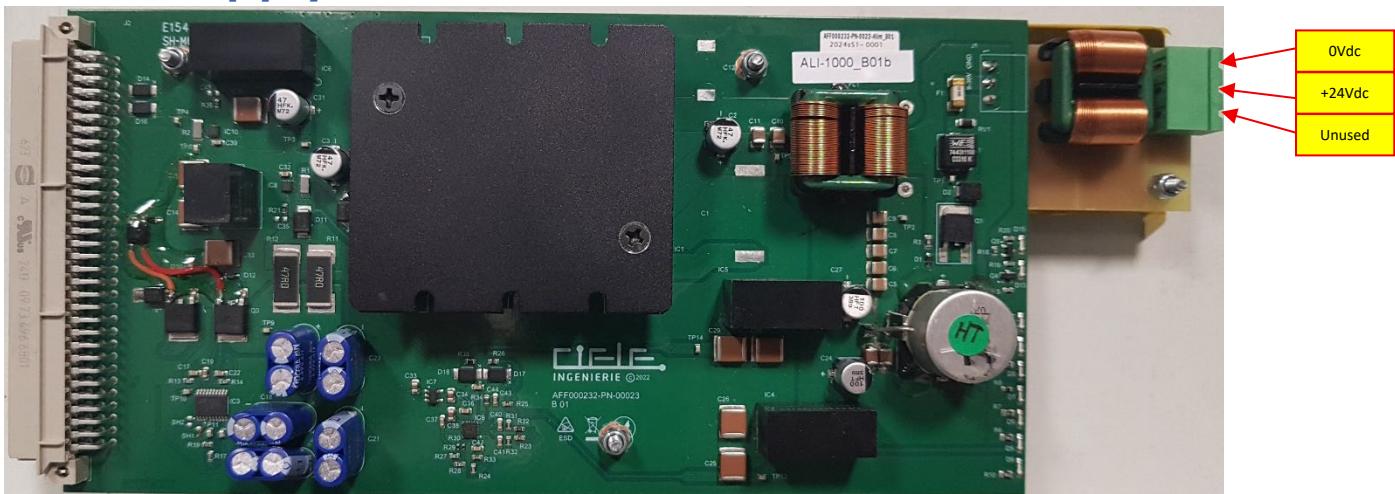

Appendix III: operating restrictions & recommendations

Nominal operating conditions of the equipment are specified on its nameplate. This domain is mainly defined in terms of:

- Minimum/Maximum – Flowrate
- Maximum – Pressure
- Minimum/Maximum – Temperature

Flowrate restrictions specify the equipment's optimal performance range (measurement accuracy and repeatability).

Pressure and temperature restrictions involve the equipment's mechanical dimensions and define the authorized operating range.

Remark: When operating temperature is higher than the indicated value, the maximum authorized pressure shall be reduced, in strict application of the ASME B31.3 or NF EN 1759-1 Standard

IMPORTANT: Note that for both safety and functional reason, the Electronic Enclosure should be protected from direct sunrays which might lead to overheating (suitable sunshade for example).

Gasket

Be sure to use gaskets that are suitable for flange types and comply with ASME B16.20 and ASME B16.21 or NF EN 1514 and NF EN 12560.

 **Never reuse used seals.**

Flange bolting

The material of flange bolting shall be chosen in ASTM A 193 B7 (rods) and ASTM A 194 2H (nuts) according to EN ISO 898-1 standard for temperature between -45°C and +480°C.

Tightening torque

Size & Torque values Uncoated bolts				Size & Torque values Coated bolts			
M	N.m	NPS	ft-lb	M	N.m	NPS	ft-lb
14	110	1/2	60	14	85	1/2	45
16	160	5/8	120	16	130	5/8	90
20	350	3/4	210	20	250	3/4	160
24	550	7/8	350	24	450	7/8	250
27	800	1	500	27	650	1	400
30	1,150	1 1/8	750	30	900	1 1/8	550
33	1,550	1 1/4	1,050	33	1,200	1 1/4	800
36	2,040	1 3/8	1,400	36	1,600	1 3/8	1,050
39	2,650	1 1/2	1,800	39	2,050	1 1/2	1,400
42	3,350	1 5/8	2,350	42	2,550	1 5/8	1,800

Recommended tightening torque for Klingsil gasket type

When the meter is associated with one or more upstream and/or downstream pipes on delivery (e.g. spool piece integrating a flow conditioner), the tightening of the relevant bolts must be checked before commissioning.

A label is fixed to the flanges at the factory before delivery.



Removal from measurement line

The equipment is designed to operate under pressure and must be depressurized and drained before being removed from the measurement line.



Important: Ensure that the line is completely depressurized before loosening the connecting bolts, and that the liquid will be completely collected in a retention tank (or equivalent).

Flow Conditioning

The performance of ultrasonic flowmeters can be affected by fluid stream rotation and asymmetry in the upstream flow profile. These factors are often caused by the pipe configuration (e.g., elbows, diameter reductions, etc.) and upstream accessories such as valves, filters, and pumps. Flow conditioning devices must be installed upstream of the meters to reduce the effect of these disturbances (API MPMS 5.8, ISO 12242).

FAURE HERMAN can integrate these devices with its meters as long with upstream and downstream piping, to ensure compliance with applicable standards recommending straight upstream and downstream lengths (respectively 10 x DN and 5 x DN).

It is strongly recommended to calibrate meters equipped with these straight lengths with or without a flow conditioning device.

Appendix IV: safety Information



While operating, especially at fluid max temperature, external surfaces may become hot.

Important information to read before installation

This manual contains important safety instructions. It is essential that you read and understand the operations to be performed before installing, connecting and commissioning the equipment. Failure to follow these instructions and warnings may result in damage to the equipment and/or danger to operating personnel.

Personnel requirements

Ensure that operators and maintenance personnel have all safety equipment applicable to the area of operation (safety glasses, hearing protection, safety shoes, etc.) and are trained for the activities involved.

Unauthorized personnel must not have access to installation and/or maintenance operations on the equipment.

Risks resulting from failure to follow instructions and warnings

Failure to follow these instructions and warnings may:

- Expose personnel to mechanical, electrical and/or chemical hazards
- Damage the equipment (meter)
- Pollute the environment by releasing harmful or polluting substances

Safety instructions

Power supply must be disconnected (Power-off the Class 2 24Vdc power supply) and possibly meter depressurized before any work is performed to avoid electrical and pressure-related hazards.

The safety instructions in this manual as well as all safety regulations and recommendations in force in the country of installation must be observed.

Operating conditions

Operating range indicated on the meter's nameplate must be strictly observed. The reliability and performance of the equipment are only guaranteed if it is installed and operated as specified in this manual.

Installation, operation and maintenance of the equipment must be carried out using the appropriate tools. Never use hammers or tools that may generate sparks or damage the electrical protection of the equipment (enclosure, cable glands, conduit, etc.). If impact wrenches are used, make sure to respect the torque values specified in this manual.

Installation, service and maintenance of the equipment must be performed by qualified personnel. All spare parts must be approved by FAURE HERMAN.

For any further information concerning the installation, use or maintenance of the equipment, please contact the Support Service by mail to : sales@faureherman.com

Repair and maintenance

Repairs and modifications to the equipment are only possible after formal agreement from FAURE HERMAN. The use of spare parts not recognized by FAURE HERMAN releases FAURE HERMAN from its responsibility for all consequences linked to this original modification.

Return

Contact FAURE HERMAN before returning the equipment to the factory.

If the meter has been used to measure dangerous, toxic or corrosive liquids, the operator must make sure that it has been properly rinsed and decontaminated before being returned to the factory.

Appendix V:

ATEX & IECEx Installation

This equipment is ATEX (Directive 2014/34/EU) certified and IECEx complies with the essential health and safety requirements for the design and construction of equipment intended for use in potentially explosive atmospheres.

Ensure that the equipment is used in full compliance with the instructions given in the certificates and the nameplate.

This equipment incorporates ATEX / IECEx certified components relating to the design and construction of equipment for use in potentially explosive atmospheres (Directive 2014/34/EU).

General safety information

The equipment must remain de-energized during the installation and maintenance phases.

For safe operation, the equipment must be used in accordance with the criteria defined by the ATEX / IECEx certificate and nameplate. Be sure to observe all instructions concerning the equipment and components contained in this manual.

The equipment must be installed and used only in areas that comply with its protection rating as specified on the rating plate.

If the equipment is connected to other electrical systems, check that the electrical protection systems are fully compatible.

Risk Analysis (Directive 2014/68/EU)

Suitable Resistance	Requirement
Excessive temperature and pressure.	Consideration of temperature and pressure limits by design. Limitations are indicated on the equipment plate. It is the user's responsibility to install suitable devices to limit pressure and temperature.
Influence of wind/snow.	No influence given the small surfaces.
Earthquakes	The equipment is not intended for use in seismic zones. If this is not the case, it is the user's responsibility to provide the appropriate protection devices.
Reaction of the supports, fixings and piping.	The equipment is intended to be connected to other piping and does not have any specific supports.
Thermal fatigue.	Design according to ASME B31.3. Material selection.
Mechanical fatigue.	Measuring instrument. It is the user's responsibility to provide a stress-free installation.
Vibrations.	Measuring instrument. It is the user's responsibility to provide an isolated installation far from sources of vibration.

Handling and Operations	Comments
Closing and opening.	The equipment does not have an opening or closing mechanism.
Hazardous emissions from valves.	The equipment does not have a valve.
Access to the interior.	The equipment has no access (manhole cover ...).
Surface temperature.	It is the user's responsibility to report hot surfaces.
Decomposition of unstable fluid.	The equipment is used during fluid transfer, not for storage.
Handling.	Equipment with a mass of more than 30 kg is equipped with lifting rings for safe handling.
Purge and Venting	Comments
Water hammer	Measuring instrument. It is the user's responsibility to install devices to prevent water hammer.
Collapse under the effect of the vacuum.	Minimum operating pressure greater than 1 bar.g indicated on the plate. The equipment is not designed to operate under vacuum.
Corrosion and Chemical attack	Comments
Uniformly generalized	Consideration of a corrosion allowance. Choice of materials and application of paints adapted to the environment. It is the user's responsibility to periodically check the condition of his installation.
Selective.	Choice of materials.
Galvanic.	Choice and compatibility of materials. It is up to the user to put in place the appropriate devices (grounding braid, cathodic protection ...).
By differential ventilation.	Choice of materials. Keeping equipment full of liquid.
Cavernous by inter granular puncture.	Choice of materials. Compliance with NACE MR0175 requirements if applicable.
Ammonia.	Choice of materials.
Under stress.	Choice of materials. Compliance with NACE MR0175 requirements if applicable.
Wear	Comments
Corrosion erosion.	Choice of materials. Application of a corrosion allowance. Application of paints adapted to the environment.
Corrosion cavitation.	Choice of materials. Measuring instrument. It is the user's responsibility to install devices to avoid cavitation.
Abrasion	Choice of materials. Application of a corrosion allowance. It is the user's responsibility to periodically check the condition of the equipment.



FAURE HERMAN

2, Lieu-dit L'Archette
72400 La Ferté Bernard
France
Tel : +33 (0)2 43 60 28 60

FAURE HERMAN – USA

8280 Willow Place Dr. North
Suite 150
Houston, TX 77070 (U.S.A)
Tel : +1 713 623 0808